


# SUNTUF<sup>®</sup> 76 / 15 (Omega)

## Installation Guide



### Profile Dimensions

Profile (mm)	Thickness (mm)	Length (m)	Width (mm)	Effective Width (mm)	Side-Lap (%)
76 / 15	0.8	1.5 - 11.6	810	760	6.2
			1260	1216	2.5
			1870	1824	3.5

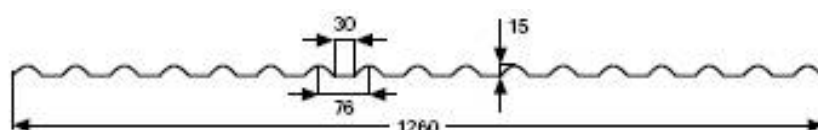

### Load / Span Data

Load (kg/m <sup>2</sup> )	Maximum Roof Span (mm)
50	1100
80	1000
110	900

- The dimensions depicted do not supersede the requirements of local construction codes.
- Purlins spans are based on the panel's structural properties, sheet deflection, potential wind and snow load, hail and other applicable factors according to construction practice, professional expertise and previous field experience.
- In vertical walls the spans can be increased by 10%.
- Minimum recommended slope for a new roof – 10%.
- Maximum recommended sheet length – 7.0 m.

### Safety

- Do not step directly on the sheets - before, during or after installation.
- Work according to local safety regulations.
- Use stepping ladder or crawling boards.



### Positioning

- The sheets must be laid on the roof against the primary direction of wind and rain.
- The SUNTUF sheet must be installed without any stresses. Do not pull, stretch or force the sheets when the profiles are not perfectly matched.
- Always install with the UV protected side facing out.



# SUNTUF<sup>®</sup> 76 / 15 (Omega) Installation Guide



## Curved Roof Fastening

- Minimum curving radius along the corrugations - 3.0 m.



## Roof and Wall Positioning and Fastening

- Start fastening the screws on the Side lap where the Palruf sheet over-lap the previously installed sheet.
- Fasten the screws on the lower edge purlin, each second corrugation valley, starting at the same side.
- Fasten at the internal purlins, at each third corrugation valley.
- Fasten the screws at the upper edge purlin, at each second corrugation valley, starting at the same side.
- Fasten the stitching screws at the overlaps, starting at the same side, approximately every 300 mm.
- Wall mounting (cladding) – The fasteners at the corrugations valley, except at the side-lap.



Internal Purlin Fastener location



External Purlin Fastener location


## Side-Lap

- Use tow corrugations Side Lap where the slope smaller than 10%, long spans and large rain loads.
- Start from the side where the SUNTUF sheet over-lap on top of the other sheet.
- Apply sealing tape along the crest centerline.
- Use sheet to sheet (stitching) fasteners between the purlins, every 300-400 mm .



## End-Lap

- Maximum overhang up to 100 mm from screw centerline.
- Minimum overhangs 50 mm from screw centerline.
- Apply sealing tape along screws centerline. Roof edge – not more than 100 mm.



## Stitching screw

- Are needed for improving side lap sealing in cases of slope smaller than 10%, long spans and large rain loads.



# SUNTUF<sup>®</sup> 76 / 15 (Omega) Installation Guide




## Screws and Washers

- Crest fixing - Self-drilling ¼" x 1 ½" screw.
- Valley fixing - Self-drilling ¼" x 1" screw.
- Recommended washer/gasket: 25mm diameter- galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.
- Never use PVC washers or any unapproved material.
- **PALRAM washers are highly recommended.**
- It is recommended to use a compatible crest rider with EPDM attached gasket.
- It is recommended to pre-drill the screw holes in the SUNTUF sheets, 3-4 mm bigger diameter than the screw.



## Fastening Tips

- Use adjustable electric screwdriver.
- The screw must be installed perpendicular to the SUNTUF sheet.
- **Important - Do not over-tighten!**

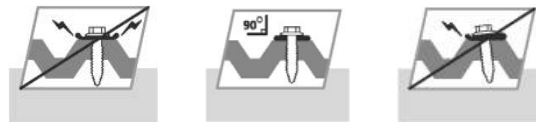

## Cutting / Sawing tools

- Circular saw with small teeth.
- Jigsaw.
- When Sawing use high blade speed and slow feed rate.
- Support the sheet in the vicinity of the cut and clean dust and splinters away.



## Handling and Storage (Packed sheets)

- Store in a shaded place, protect from direct sunlight and rain.
- Avoid covering the sheets with heat absorbing materials.
- Avoid contact or environment of chemicals.
- Protect the sheets from any damage.



## Accessories

### Use only PALRAM approved accessories

- Compatible Silicone.
- Butyl Rubber or Expanding Sealing tape.
- Closure Fixtures.



## Drilling



# SUNTUF® 76 / 15 (Omega) Installation Guide



- Hole diameter must be 3-4 mm larger than the diameter of the screw.
- The drill should be held perpendicular to the sheet surface.
- Support the sheet in the vicinity of the hole and clean dust and splinters away.

## Applying the Sealing Tape

- Clean the surface before applying the tape.
- Apply the tape slowly, uniformly and with no stresses.
- Apply one tape line along the screw holes location or 2 tape lines on both sides of the screw holes line.



## Important Notes

- Be sure to install the UV protected side facing the sun radiation.
- Avoid any stress source.
- **Pre drilled holes – Oversized holes should be 3-4mm wider than the screw diameter.**
- Do not over-tighten.
- Use only approved accessories, including rubber washers, silicones, sealing tape, closure fixtures etc. Soft PVC washers looking exactly like EPDM washers are not compatible with Polycarbonate sheets.
- Avoid contact with non-compatible chemicals and materials.

**For information about Accessories, please refer to the CATALOG OF FINISHING ACCESSORIES.**

Inasmuch as Palram Industries has no control over the use to which others may put the material, it does not guarantee that the same results as those described herein will be obtained. Each user of the material should make his own tests to determine the material's suitability for his own particular use. Statements concerning possible or suggested uses of the materials described herein are not to be construed as constituting a license under any Palram Industries patent covering such use or as recommendations for use of such materials in the infringement of any patent. Palram Industries or its distributors cannot be held responsible for any losses incurred through incorrect installation of the material. In accordance with our Company policy of continual product development you are advised to check with your local Palram Industries supplier to ensure that you have obtained the most up to date information.

Europe  
UK  
Israel  
USA  
Australia  
Far East



### EUROPE

PALRAM EUROPE LTD.  
Tel (44) 1302 380 777  
Fax (44) 1302 380 788  
sales.europe@palram.com

PALRAM UK  
Tel (44) 1302 380 738  
Fax (44) 1302 380 739  
sales.uk@palram.com

### ISRAEL

PALRAM ISRAEL LTD.  
Tel (972) 4 8459 900  
Fax (972) 4 8459 980  
palram@palram.com

### USA

PALRAM Americas  
Tel 610 285 9918  
Fax 610 285 9928  
palramamericas@palram.com